



Theta Hz the transducer is used for frequency measurement. The output signal is proportional to measured frequency and is either load independent DC Current or load independent DC Voltage..

Special Features

- Fully onsite programmable input range
- Available in Single or Dual output type
- Onsite selectable output type.(DC current / DC voltage)
- Accuracy class 0.2 (IEC / EN 60688)
- Seven Segment LCD Display
- RS-485 (Modbus) Communication
- Output Response Time < 400 msec

Application

Theta Hz the transducer is used for frequency measurement.
The output signal is proportional to measured frequency and is either load independent DC Current or load independent DC Voltage.



Model Theta Hz

Transducer

Product Features

| | |
|--------------------------------|--|
| Measuring Input | Sine wave or distorted wave form of nominal input voltage with fundamental wave. |
| Analog Output (Single or dual) | Isolated analog output which can be set onsite to either voltage or current output |
| Accuracy | Output signal accuracy class 0.2 as per International Standard IEC/EN 60 688. |
| Programmable Input / Output | The Transducer can be programmed onsite using front key & display or through programming port (COM) or through RS-485. |

| | |
|--------------------------------|---|
| LED Indication | LED indication for power on and output type. (Current output : Red LED, Voltage output : Green LED) |
| Display Module (Optional) | Optional 7 segment LCD display with backlit & keypad. For displaying measured parameters & onsite configuration of Input / Output |
| Rs485 Communication (Optional) | Optional RS485 communication is available. For reading measured parameters & onsite configuration of Input / Output |

Symbols and their meanings

| | |
|----|---|
| X | Input AC Voltage / AC Current |
| X0 | Start value of input |
| X1 | Elbow value of input |
| X2 | End value of input |
| Y | Output DC Voltage / DC Current |
| Y0 | Start value of output DC Voltage / DC Current |
| Y1 | Elbow value of output DC Voltage / DC Current |
| Y2 | End value of output DC Voltage / DC Current |
| RN | Rated value of output burden |
| UN | Nominal Input Voltage |

Accuracy (Acc. to IEC / EN 60688)

| | |
|---|---|
| Reference Value | Output end Value Y2 (Voltage or Current) |
| Basic Accuracy | 0.2 * C |
| Factor C (The highest value applies if calculated C is less than 1, then C=1 applies) | |
| Linear characteristics | Bent characteristics |
| $C = \frac{1 - \frac{Y_0}{Y_2}}{1 - \frac{X_0}{X_2}} \text{ or } C=1$ | $\text{For } X_0 \leq X \leq X_1 \quad C = \frac{Y_1 - Y_0}{X_1 - X_0} \frac{X_2}{Y_2} \text{ or } C=1$ |
| | $\text{For } X_1 \leq X \leq X_2 \quad C = \frac{1 - \frac{Y_1}{Y_2}}{1 - \frac{X_1}{X_2}} \text{ or } C=1$ |

Technical Specification

Reference conditions for Accuracy

| | |
|--------------------------|---|
| Ambient temperature | 23°C +/- 1°C |
| Pre-conditioning | 30 min acc. to IEC / EN 60688 |
| Input Variable | Voltage Rated / Current Rated |
| Input waveform | Sinusoidal, Form Factor 1.1107 |
| Input signal frequency | 50 or 60Hz |
| Auxiliary supply voltage | At nominal range |
| Output Load | Rn = 7.5 V / Y2 ± 1% With DC current output signal |
| | Rn = Y2 / 1 mA ± 1% With DC voltage output signal |
| Miscellaneous | Acc. to IEC / EN 60688 |

Measuring Output Y (Single or Optional Dual) ↻

| | |
|---|---|
| Output type | Load independent DC Voltage or DC Current (Onsite selectable through DIP switches & programming.) |
| Load independent DC output | 0...20mA / 4...20mA OR 0...10V. |
| Output burden with DC current output Signal | 0 ≤ R ≤ 15V/Y2 |
| Output burden with DC voltage output Signal Y | Y2 / (2 mA) ≤ R ≤ ∞ |
| Current limit under overload R=0 | ≤ 1.25 * Y2 with current output |
| Voltage limit under R=∞ | ≤ 100 mA with voltage output |
| | ≤ 30 V with current output |
| Residual Ripple in Output signal | ≤ 1% pk-pk |
| Response Time | 400 msec |



Technical Specification

Auxiliary Power Supply

| | |
|-------------------------------------|---|
| AC/DC Auxiliary Supply | 60V . . . 300 VAC-DC \pm 5% or 24V . . . 60 VAC-DC \pm 10% |
| AC Auxiliary supply frequency range | 40 to 65 Hz |
| 60V...300 VAC-DC | Auxiliary supply consumption \leq 8VA for Single output \leq 10VA for Dual output |
| 24V...60 VAC-DC | \leq 5 VA for Single output \leq 6 VA for Dual output |

Influence of Variations


| | |
|---|---------|
| As per IEC / EN 60688 standard. Output stability | < 30min |
|---|---------|

Environmental


| | |
|----------------------------------|--------------|
| Nominal range of use | 0 to 45°C |
| Storage temperature | -40 to 70 °C |
| Relative humidity of annual mean | \leq 75% |
| Altitude | 2000m max |

Output Characteristics

Example of setting with Linear Characteristics :

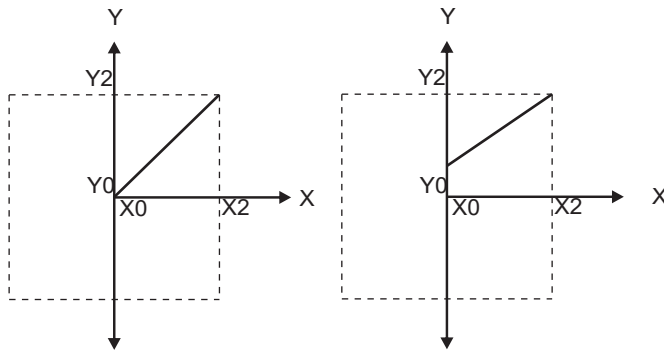

Example of setting with bent Characteristics :

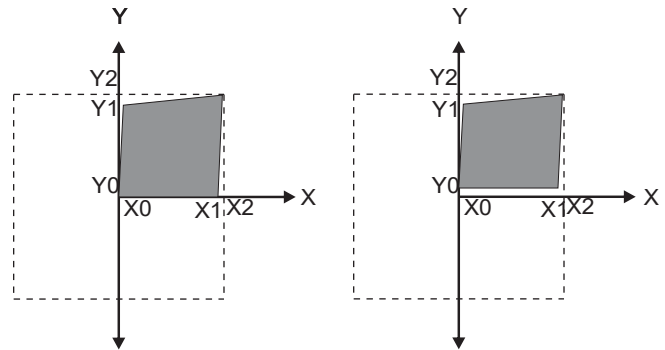

X0 = Start value of input
X1 = Elbow value of input
X2 = End value of input
Y0 = Start value of output
Y1 = Elbow value of output
Y2 = End value of output
Note: End value(Y2) of output cannot be changed onsite

Safety

| | |
|-----------------------|--|
| Protection Class | II (Protection Isolated, EN 61 010) |
| Protection | IP 40, housing according to EN 60 529 IP 20 ,terminal according to EN 60 529 |
| Pollution degree | 2 |
| Installation Category | III |
| Insulation Voltage | 50Hz, 1min. (EN 61 010-1) 7700VDC, Input versus outer surface 5200VDC, Input versus all other circuits 5200VDC, Auxiliary supply versus outer surface and output 690VDC, Output versus output versus each other versus outer surface. |

Additional Error

| | |
|-----------------------|------------------|
| Temperature influence | \pm 0.2% /10°C |
|-----------------------|------------------|

Connection Terminal

| | |
|--|--|
| Connection Element | Conventional Screw type terminal with indirect wire pressure |
| Permissible cross section of the connection lead | \leq 4.0 mm ² single wire or 2 x 2.5 mm ² fine wire |

Ambient tests

| | |
|---------------------------|--|
| EN 60 068-2-6 | Vibration |
| Acceleration | \pm 2 g |
| Frequency range | 10....150...10Hz, rate of frequency sweep: 1 octave/minute |
| Number of cycles | 10, in each of the three axes |
| EN 60 068-2-7 | Shock |
| Acceleration | 3 x 50g 3 shocks in each direction |
| EN 60 068-2-1/-2/-3 | Cold, Dry, Damp heat |
| IEC 61000-4-2/-3/-4/-5/-6 | Electromagnetic compatibility |
| EN 55 011 | |

Installation Data

| | |
|--------------------|--|
| Mechanical Housing | Lexan 940 (polycarbonate) Flammability Class V-0 acc. to UL 94, self extinguishing, non dripping, free of halogen |
| Mounting position | Rail mounting / wall mounting |
| Weight Approx. | 0.4kg |



Technical Specification




LED Indication

| | | |
|----------|--|--|
| ON LED | Aux.supply healthy condition | Green LED continuous ON |
| O/P1 LED | Output1 voltage selection Output1 Current selection | Green LED continuous ON Red LED continuous ON |
| O/P1 LED | Output2 voltage selection Output2 Current selection | Green LED continuous ON Red LED continuous ON |

Electrical Connections

| Connection | Terminal details |
|-------------------------|------------------|
| Measuring input | ~ 5 |
| | ~ 6 |
| Auxilliary Power supply | ~,+ 7 |
| | ~, - 8 |
| Measuring output - 1 | + 1 |
| | - 2 |
| Measuring output - 2 | + 3 |
| | - 4 |

Dimensions

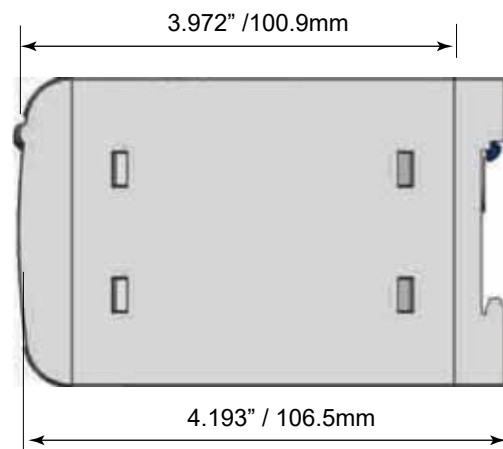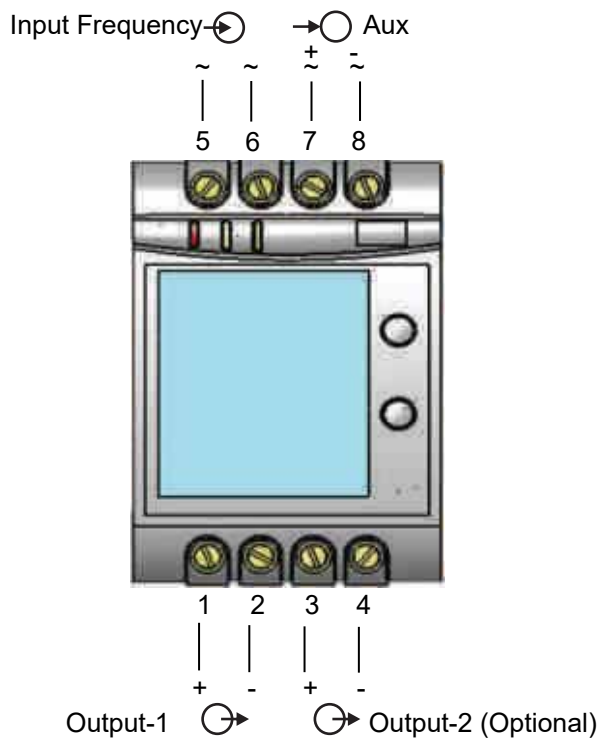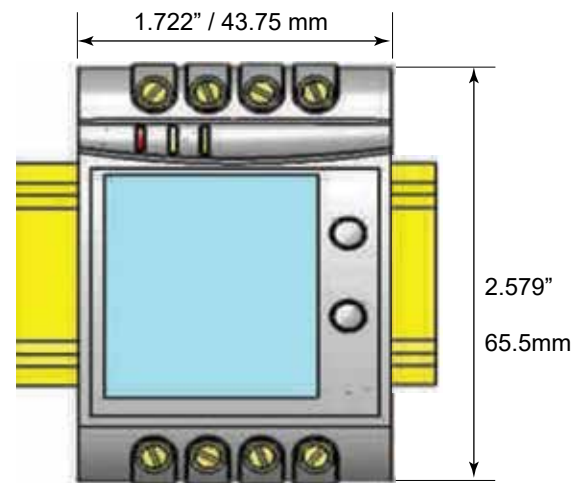




Model Theta Hz

Transducer

Programming

| | |
|---|--|
| Programming of transducer can be done in three ways | <p>1) Programming Via Front LCD & two keys.</p> <p>2) Programming Via optional RS-485(MODBUS) communication port. (Device address, PT Ratio, CT Ratio, Password, communication parameter, Output Type & simulation mode can be programmed).</p> <p>3) Programming Via Programming port available at front of Theta Hz Transducers using optional PRKAB601 Adapter.</p> |
| Programming Via Programming port (COM) | A PC with RS 232C interface along with the programming cable PRKAB 601 and the configuration software are required to program the transducer. |

| | |
|---------------------------------|--|
| The connections between | <p>PC ↔ PRKAB ↔ Transducer, The power supply must be applied to Transducer before it can be programmed.</p> <p>The Configuration software is supplied on a CD. The programming cable PRKAB 601 adjusts the signal level and provides the electrical insulation between the Transducers.</p> |
| Configuring Rish Con Transducer | To Configure the Transducer Input / Output one of the three programming methods can be adapted along with mechanical switch setting (DIP switch setting on PCB). |
| DIP Switch Setting for OUTPUT | <p>Type of output (current or voltage signal) has to be set by DIP switch</p> <p>For programming of DIP switch the user needs to open the transducer housing & set the DIP switch located on PCB to the desired output type Voltage or Current.</p> <p>Output range changing is not possible with DIP switch setting</p> <p>Refer below for DIP switch setting. The four pole DIP switch is located on the PCB in the Theta Transducer</p> |

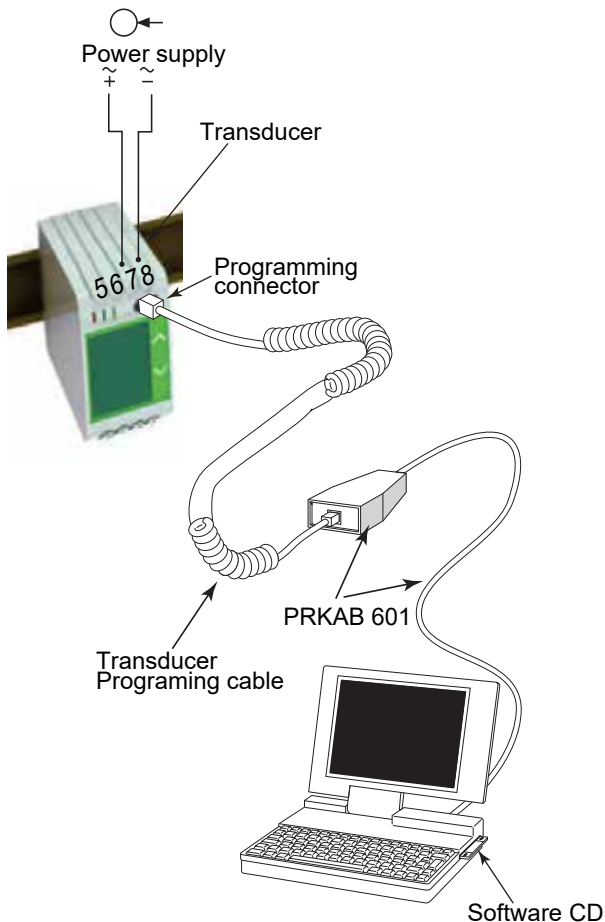

The four pole DIP switch is located on the PCB in the Transducer

| DIP Switch Setting | Type of Output Signal |
|--------------------|--------------------------|
| | load-independent current |
| | load-independent voltage |



Ordering Information Standard Version

| | | | | | | | | | |
|----------------|--------------------|---|----|---|---|---|---|---|-------|
| Product Code | TT25- | X | XX | X | X | X | X | X | 00000 |
| Input Range | 45-55Hz | 6 | | | | | | | |
| | 55-65Hz | B | | | | | | | |
| | 45-65Hz | 7 | | | | | | | |
| | 48-52Hz | A | | | | | | | |
| Input Range | 100-500V | | 8F | | | | | | |
| Power Supply | 60-300U | | | H | | | | | |
| | 24-60U | | | F | | | | | |
| Output | 1 O/P 10 | | | | 1 | | | | |
| | 2 O/P 20 | | | | 2 | | | | |
| Display Module | With Display | | | | | D | | | |
| | Without Display WD | | | | | Z | | | |
| RS485 Module | With RS-485 485 | | | | | | R | | |
| | Without RS-485 | | | | | | Z | | |
| Prog. Cable | With PRKAB 601 PRK | | | | | | | C | |
| | PRKAB 601 | | | | | | | Z | |