



Theta 20A,20V current and voltage transducer is used to measure and convert AC Voltage or Current input into a load independent DC current or voltage output signal

### Special Features

- True RMS measurement
- Available in Single or Dual output type
- Onsite selectable output type (DC current / DC voltage)
- Accuracy class 0.2 (IEC/ EN 60 688)
- Seven Segment LCD Display
- RS-485 (Modbus) Communication
- Output Response Time < 400msec

### Application

Theta 20A/20V is used to measure and convert AC Voltage or Current input into a load independent DC current or voltage output. Output signal generated is proportional to the root mean square value of the input Current or Voltage.



# Model Theta 20A/20V

## Transducer

### Product Features


Measuring Input	AC Voltage/ Current input signal , sine wave or distorted wave form.
Analog Output (Single or dual)	Isolated analog output which can be set onsite to either voltage or current output
Accuracy	Output signal accuracy class 0.2 as per International Standard IEC/EN 60 688.
Programmable Input / Output	The Transducer can be programmed onsite using front key & display or through programming port (COM) or through RS-485.

LED Indication	LED indication for power on and output type. (Current output : Red LED, Voltage output : Green LED)
Display Module	Optional 7 segment LCD display with backlit & keypad. For displaying measured parameters & onsite configuration of Input / Output
Programmable	Optional RS485 communication is available. For reading measured parameters & onsite configuration of Input / Output

### Symbols and their meanings

X	Input AC Voltage / AC Current
X0	Start value of input
X1	Elbow value of input
X2	End value of input
Y	Output DC Voltage / DC Current
Y0	Start value of output DC Voltage / DC Current
Y1	Elbow value of output DC Voltage / DC Current
Y2	End value of output DC Voltage / DC Current
RN	Rated value of output burden
FN	Nominal Frequency


### Dimensions

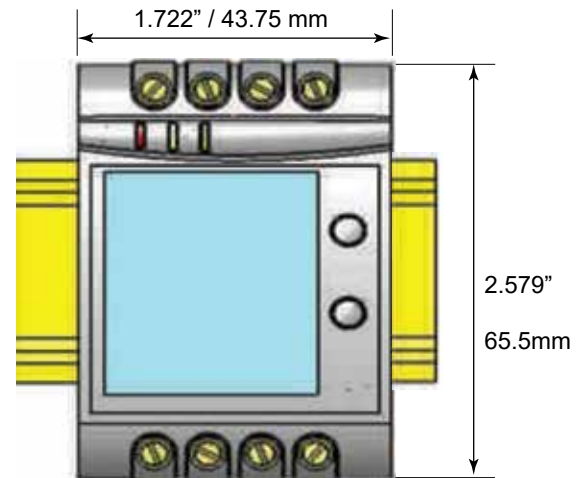

### Technical Specification

#### Reference conditions for Accuracy

Pre-conditioning	30 min acc. to IEC / EN 60688
Input Variable	Voltage Rated / Current Rated
Input waveform	Sinusoidal, Form Factor 1.1107
Input signal frequency	50 or 60Hz
Auxiliary supply voltage	At nominal range
Output Load	Rn = 7.5 V / Y2 ± 1% With DC current output signal Rn = Y2 / 1 mA ± 1% With DC voltage output signal
Miscellaneous	Acc. to IEC / EN 60688

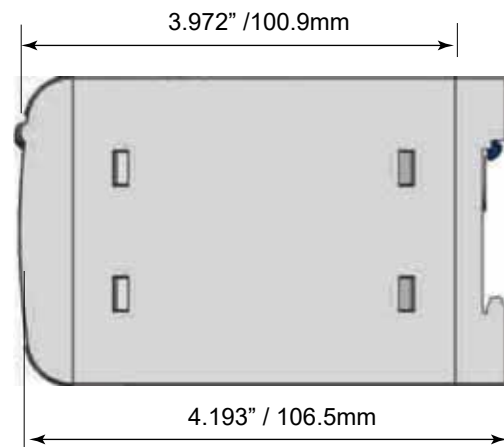



# Model Theta 20A/20V

## Transducer

### Technical Specification

#### Accuracy ( Acc. to IEC / EN 60688)

Reference Value	Output end Value Y2 (Voltage or Current)
Basic Accuracy	0.2 * C
Factor C (The highest value applies if calculated C is less than 1, then C=1 applies)	
Linear characteristics	
Bent characteristics	
$C = \frac{1 - \frac{Y_0}{Y_2}}{1 - \frac{X_0}{X_2}} \text{ or } C=1$	
$\text{For } X_0 \leq X \leq X_1 \quad C = \frac{Y_1 - Y_0}{X_1 - X_0} \frac{X_2}{Y_2} \text{ or } C=1$	
$\text{For } X_1 \leq X \leq X_2 \quad C = \frac{1 - \frac{Y_1}{Y_2}}{1 - \frac{X_1}{X_2}} \text{ or } C=1$	

#### Installation Data

Mechanical Housing	Lexan 940 (polycarbonate) Flammability Class V-0 acc. To UL 94, self extinguishing, non dripping, free of halogen
Mounting position	Rail mounting / wall mounting
Weight Approx.	0.4kg

#### Auxiliary Power Supply

AC/DC Auxiliary Supply	60V... 300 VAC-DC $\pm$ 5% or 24... 60 VAC-DC $\pm$ 10%
AC Auxiliary supply frequency range	40 to 65 Hz
Auxiliary supply consumption	
60V...300 VAC-DC	< 8VA for Single output < 10VA for Dual output
24V...60 VAC-DC	< 5 VA for Single output < 6 VA for Dual output

#### Current Transducer

Nominal input Current IN (AC RMS) (CT Secondary range)	1 A $\leq$ IN $\leq$ 5 A
CT Primary range	1 A to 9999 A
Nominal Frequency FN	45....66 Hz
Nominal input Current burden	< 0.2 VA at IN
Overload Capacity	1.2 * IN continuously, 10* IN for 3 second, repeated 5 times at 5 minutes intervals. 50* IN for 1 second, repeated 1 time at 1 hour interval (max 250 A).
No need of external potentiometer. User can set full scale output for desired input with the help of programmable CT secondary.	

#### Additional Error

Temperature influence	$\pm$ 0.2% /10°C
-----------------------	------------------

#### Measuring Input X $\rightarrow$

Voltage Transducer (Theta 20V)	
Nominal input Voltage UN (AC RMS) (PT Secondary range)	57V $\leq$ UN $\leq$ 500 V
PT Primary range	57V to 400 kV
Nominal Frequency FN	45....66 Hz
Nominal input Voltage burden	< 0.6 VA at UN
Overload Capacity	1.2 * UN continuously, 2* UN for 1 second, repeated 10 times at 10 minute intervals (Maximum 300V with power supply powered from measuring input).
No need of external potentiometer. User can set full scale output for desired input with the help of programmable PT secondary.	

#### Measuring Output Y (Single or Optional Dual) $\rightarrow$

Output type	Load independent DC Voltage or DC Current (Onsite selectable through DIP switches & programming.)
Load independent DC output (Y)	0...20mA / 4...20mA OR 0...10V.
Output burden with DC current output Signal	0 $\leq$ R $\leq$ 15V/Y2
Output burden with DC voltage output Signal Y	Y2 / (2 mA) $\leq$ R $\leq$ $\infty$
Current limit under overload R=0	$\leq$ 1.25 * Y2 with current output $\leq$ 100 mA with voltage output
Voltage limit under R= $\infty$	< 1.25 * Y2 with voltage output $\leq$ 30 V with current output
Residual Ripple in Output signal	$\leq$ 1% pk-pk
Response Time	400 msec

#### Ambient tests

EN 60 068-2-6	Vibration
Acceleration	$\pm$ 2 g
Frequency range	10...150...10Hz, rate of frequency sweep: 1 octave/minute
Number of cycles	10, in each of the three axes
EN 60 068-2-7	Shock
Acceleration	3 x 50g 3 shocks in each direction
EN 60 068-2-1/-2/-3	Cold, Dry, Damp heat
IEC 61000-4-2/-3/-4/-5/-6 EN 55 011	Electromagnetic compatibility



# Model Theta 20A/20V

## Transducer

### Technical Specification

#### Safety

Protection Class	II (Protection Isolated, EN 61 010)
Protection	IP 40, housing according to EN 60 529 IP 20 ,terminal according to EN 60 529
Pollution degree	2
Installation Category	III
Insulation Voltage	50Hz, 1min. ( EN 61 010-1) 7700VDC, Input versus outer surface 5200VDC, Input versus all other circuits 5200VDC, Auxilliary supply versus outer surface and output 690VDC, Output versus output versus each other versus outer surface.

#### Connection Terminal

Connection Element	Conventional Screw type terminal with indirect wire pressure
Permissible cross section of the connection lead	≤ 4.0 mm <sup>2</sup> single wire or 2 x 2.5 mm <sup>2</sup> fine wire

#### Influence of Variations

As per IEC / EN 60688 standard.	
Output stability	< 30min


#### Environmental

Nominal range of use	0 to 45°C
Storage temperature	-40 to 70 °C
Relative humidity of annual mean	≤ 75%
Altitude	2000m max

### Output Characteristics


X0 = Start value of input                      Y0 = Start value of output  
 X1 = Elbow value of input                    Y1 = Elbow value of output  
 X2 = End value of input                      Y2 = End value of output

Note: End value(Y2) of output cannot be changed onsite

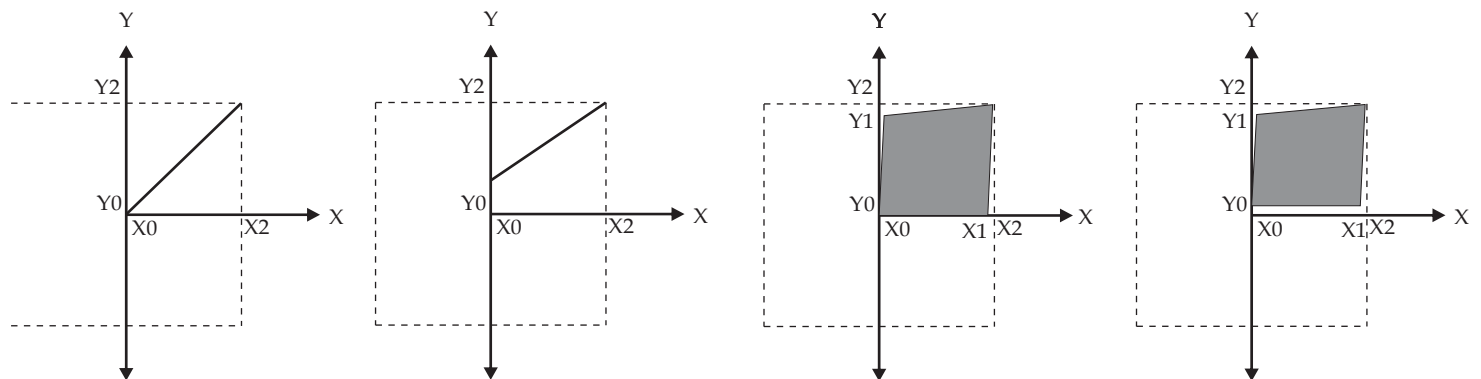

### Electrical Connections

Connection	Terminal details
Measuring input	~ 5
	~ 6
Auxilliary Power supply	~,+ 7
	~, - 8
Measuring output - 1	+ 1
	- 2
Measuring output - 2	+ 3
	- 4

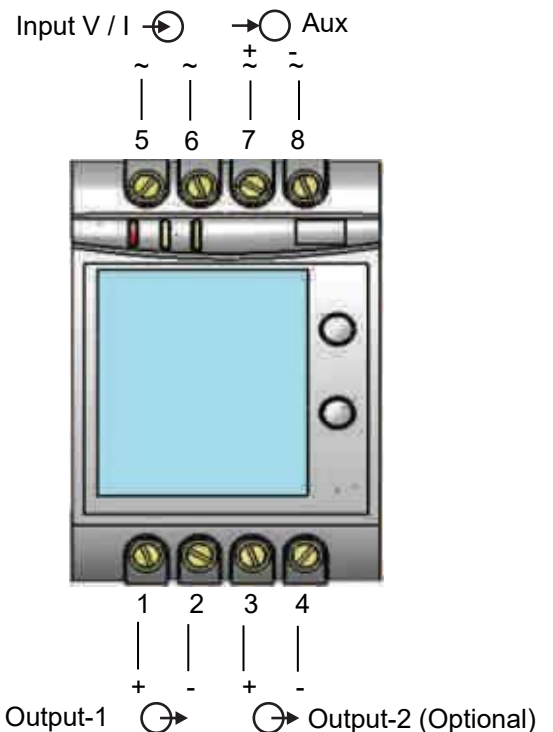



# Model Theta 20A/20V

## Transducer

### Technical Specification


#### LED Indication

ON LED	Aux.supply healthy condition	Green LED continuous ON
O/P1 LED	Output1 voltage selection Output1 Current selection	Green LED continuous ON Red LED continuous ON
O/P1 LED	Output2 voltage selection Output2 Current selection	Green LED continuous ON Red LED continuous ON

### Programming

Programming of transducer can be done in three ways	<p>1) Programming Via Front LCD &amp; two keys.</p> <p>2) Programming Via optional RS-485(MODBUS) communication port. (Device address, PT Ratio, CT Ratio, Password, communication parameter, Output Type &amp; simulation mode can be programmed).</p> <p>3) Programming Via Programming port available at front of Transducers using optional PRKAB601 Adapter.</p>
Programming Via Programming port (COM)	A PC with RS 232C interface along with the programming cable PRKAB 601 and the configuration software are required to program the transducer.

The connections between	<p>PC <math>\longleftrightarrow</math> PRKAB <math>\longleftrightarrow</math> Transducer, The power supply must be applied to Transducer before it can be programmed.</p> <p>The Configuration software is supplied on a CD. The programming cable PRKAB 601 adjusts the signal level and provides the electrical insulation between the Transducers.</p>
Configuring Rish Con Transducer	To Configure the Transducer Input / Output one of the three programming methods can be adapted along with mechanical switch setting (DIP switch setting on PCB).
DIP Switch Setting for OUTPUT	<p>Type of output (current or voltage signal) has to be set by DIP switch</p> <p>For programming of DIP switch the user needs to open the transducer housing &amp; set the DIP switch located on PCB to the desired output type Voltage or Current.</p> <p>Output range changing is not possible with DIP switch setting</p>

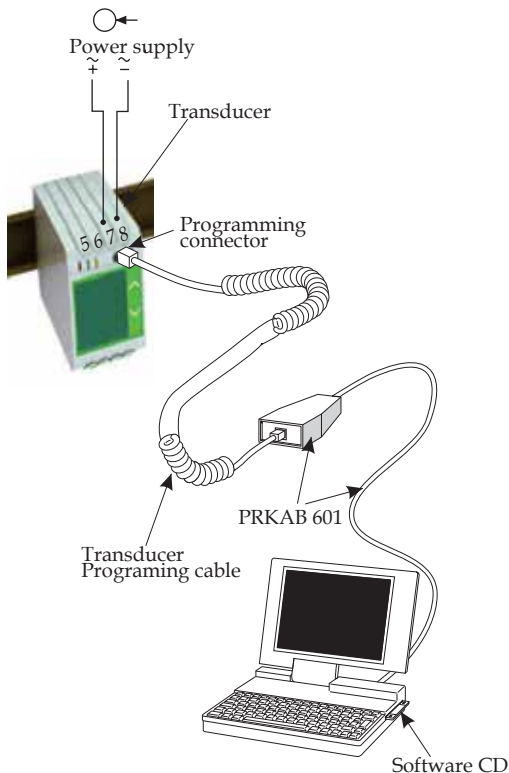

#### The four pole DIP switch is located on the PCB in the Transducer

DIP Switch Setting	Type of Output Signal
	load-independent current
	load-independent voltage



### Ordering Information

Product Code	TT20-	X	XX	X	X	X	X	X	00000
Product Type	THETA 20A	I							
	THETA 20V	V							
Input Range	Prog. 1...5A 1-5A		74						
	Prog. 57...500V 57-500V		8E						
Power Supply	60-300U			H					
	24-60U			F					
Output	1 O/P 10				1				
	2 O/P 20				2				
Display Module	With Display					D			
	Without Display WD					Z			
RS485 Module	With RS-485						R		
	Without RS-485						Z		
Prog. Cable	With PRKAB 601 PRK							C	
	Without PRKAB 601							Z	